

***KPSI™ Level and Pressure Transducers  
User's Manual***

13<sup>th</sup> Edition

July 2006



***Sensing the Environment™***

Visit us on the web:  
**[www.PressureSystems.com](http://www.PressureSystems.com)**

On-line Transducer Store:  
**[www.LEVELandPRESSURE.com](http://www.LEVELandPRESSURE.com)**

©This User's Manual is a copyright product of Pressure Systems, Inc., 2006

Permission is hereby granted to make copies and distribute verbatim copies of this manual, provided the copyright notice and this permission notice are preserved on all copies.

## Our Company

Pressure Systems is an ISO9001:2000 certified U.S. manufacturer of submersible and above ground pressure transducers for environmental, industrial and municipal applications. Our KPSI™ line of transducers have been specified in thousands of projects throughout the United States, Canada and Europe by geologists, system integrators, national engineering firms and a variety of government agencies. Typical applications include, but are not limited to, pump control, tank level monitoring, sewage lift station operation, reservoirs, weirs, flumes, site remediation, watershed management, storm water/well monitoring, pump/pipeline pressures and compressor pressures.

## Website and E-Mail

You may visit our website at [www.PressureSystems.com](http://www.PressureSystems.com) to look at our latest new product releases, application notes, product certifications and specifications, as well as Intrinsic Safety control installation drawings. E-mail your questions and comments to us: [sales@PressureSystems.com](mailto:sales@PressureSystems.com).

## E-commerce

Orders may be placed on-line by visiting our e-commerce site ([www.LevelandPressure.com](http://www.LevelandPressure.com)) or by contacting the factory or local representative.

## Applicable Products

This manual provides information applicable to the use of the following **KPSI™** water level and pressure transducers:

Series 169/173; 116/126  
Series 200  
Series 700/710/720/730/735  
Series 320/330/335/340  
Series 300DS  
Series 27/28/30/35  
Series 705  
Series 750  
Series 770

**Please note: Series 500, 510, and 550 have separate manuals.**

**Series 770 has a separate manual to address use of the Re-Range System.**

---

# Table of Contents

<b>1.0</b>	<b>Order Administration</b> .....	<b>1</b>
	Order Entry .....	1
	E-Commerce .....	1
	Payment .....	1
	Method of Delivery .....	1
	Delivery Times .....	1
	Minimum Order .....	1
<b>2.0</b>	<b>Product Description</b> .....	<b>2</b>
	General Characteristics .....	2
	Care and Handling .....	2
	Calibration .....	2
	Intrinsic Safety .....	2
<b>3.0</b>	<b>Product Accessories and Options</b> .....	<b>3</b>
	Nose Caps .....	3
	810 SuperDry™ Vent Filter or 815 Bellows .....	3
	Sacrificial Anode .....	3
	Absolute/Sealed Gage Transducer .....	3
	Polyurethane & Tefzel® Jacketed Cable .....	4
	Lightning Protection .....	5
	½" Male NPT Conduit Fitting .....	5
	Variety of Electrical Outputs .....	5
	Reverse Signal .....	5
	Temperature Output .....	5
	Cable Hanger .....	6
	Cable Splicing Kit .....	6
<b>4.0</b>	<b>Installation &amp; Maintenance Tips</b> .....	<b>7</b>
	General Installation Procedures .....	7
	Transducer Anchors .....	7
	Transducer Submersion .....	7
	SuperDry™ Vent Filter (Desiccant) or Aneroid Bellows Installation .....	7
	Cable Protection .....	7
	Bending of Cable .....	8
	Cable Compression .....	8
	4-20 mA Wiring .....	8
	VDC Wiring .....	8
	Series 750 .....	8
	Sealed-Gage Transducer Configured for Altitude Above Sea Level .....	8
	Position Sensitivity .....	8
	General Maintenance Tips .....	9
	Desiccant Maintenance .....	9
	Clogged Nose Piece or Dirty Diaphragm .....	9
	Cleaning Your Transducer .....	10

<b>5.0</b>	<b>Warranty and Product Return Procedures</b> .....	<b>11</b>
	Restocking Policy .....	12
	<b>Appendix A - Drawings and Diagrams</b> .....	<b>A-1</b>
	<b>Appendix B - Frequently Asked Questions</b> .....	<b>B-1</b>
	<b>Appendix C - Field Checkout and Troubleshooting Techniques</b> .....	<b>C-1</b>
	<b>Appendix D - Calibration Calculations</b> .....	<b>D-1</b>

This page intentionally left blank

## **1.0 Order Administration**

### **Order Entry**

We accept orders by fax, phone, mail and e-mail. To ensure accuracy, all orders are reviewed by technical specialists before being submitted for production. Orders are scheduled into production within 4 business hours of order receipt. Our order desk fax number is (757) 865-8744.

### **E-commerce**

Orders may be placed on-line by visiting our e-commerce site ([www.LevelandPressure.com](http://www.LevelandPressure.com)).

### **Payment**

Net 30 terms from the invoice date are available upon approval of credit. We require three (3 ) industry credit references and one (1) bank reference. We accept Visa/MasterCard, American Express, corporate checks, money orders and cash. We will also ship C.O.D., via UPS.

### **Method of Delivery**

All orders are shipped freight on board (FOB) from our factory in Hampton, Virginia, USA. We typically ship UPS, but will use any shipper you specify. The UPS charges are billed to your invoice (Prepay & Add), except for C.O.D. shipments.

### **Delivery Times**

Shipment for standard products is typically 5 working days from order placement, but we do offer an **Expedited Shipment Option** 1-4 working days from receipt of order at \$100.00 per unit for selected products.

### **Minimum Order Charge**

\$50.00 net after discount

*All prices are subject to change.*

## 2.0 Product Description

### General Characteristics

Our submersible pressure transducers use isolated-diaphragm sensors that are specifically designed for use with hostile fluids and gases. These sensors utilize a silicon pressure cell that has been fitted into a stainless steel or titanium package with an integral, compliant stainless steel or titanium barrier diaphragm. This sensor assembly is housed in a rugged 316 stainless steel or titanium case which provides for a variety of pressure inputs from 0-2 (14 kPa) through 0-15000 psi (103 mPa). Our devices feature internal signal conditioning. Standard outputs are 4-20 mA , mV and VDC.

All units containing active electronic components have surge and reverse polarity protection. For ease of use in the field, our transducers are permanently laser engraved with our logo and name, wiring information, part number (P/N), serial number (S/N), date of manufacture (DOM), range, excitation and output. Pressure transducers are offered in diameters of 1.0 (25 mm) and 0.75 inches (19 mm).

### Care and Handling

Our submersible transducers are designed for rugged use. However, they need protection from over pressure and sharp impact. When lowering them into a liquid, penetrate the surface slowly and only to the depth necessary. Avoid dropping the unit from above the surface. Clean all transducers by rinsing them in a mild detergent. Direct probing of the diaphragm or attempts to remove protective screens will damage the sensor, voiding the warranty.

### Calibration

All pressure transducers are shipped with calibration information unique to each transducer. Make sure you keep each calibration report. However, should you misplace your calibration sheet, you can contact the factory and request a duplicate.

### Intrinsic Safety Approvals

Most of our products have UL, CUL, and FM certification for intrinsic safety. Their respective installation control drawings can be downloaded from our website. Several of our product lines also carry ABS approval. Most products are CE compliant to EN61000-6-4:2001 and EN 61000-6-2:2001. CE compliant units are labeled accordingly.

## 3.0 Product Accessories and Options

### Nose Caps

There are several different user-installable nose caps for the 700, 710, 720, 730, 735 submersible pressure transducers. The closed-face ported cap (Delrin) (P/N 42-01-1314A) with #8-32UNC-2B threaded hole is best used where weights are required and for those installations where users may encounter sharp, protruding objects. The open-face cap (P/N 42-30-6659) which allows maximum contact with the liquid media is ideal for wastewater and "greasy" applications where clogging of the sensor is a concern. The 1/4" male NPT pressure cap (P/N 42-01-64154) are not only useful for calibration purposes but also allows the device to be used as a submersible or above ground pressure transducer. The piezometer cap (P/N 42-30-66765) allows the unit to be buried in saturated soil without damage to the sensor diaphragm. We also provide 1/4" British pipe thread connections (G 1/4 and M14x1.5). Please contact Customer Service for details.

### 810 SuperDry™ Vent Filter or 815 Aneroid Bellows

All submersible transducers with vented gauge format are supplied with a protective barrier that guards against moisture buildup in the cable vent tube. The 810 SuperDry™ vent filter is installed free of charge and is guaranteed to operate maintenance free for one year. We also offer the 815 Aneroid Bellows as a maintenance free option that can be used on submersibles with accuracies of:  $\pm 1\%$ ,  $\pm 0.5\%$ , or  $\pm 0.25\%$  FSO. These barriers ensure reliable operation and long life as they protect sensitive electronic components from mildew and prevent the formation of a liquid column in the vent tube. Any such liquid column directly affects calibration of the transducer.

### Sacrificial Anodes

Our sacrificial anodes are made from a special zinc alloy formulated to guarantee continued effectiveness over long periods. Because the anodes are 95% galvanic, they will not corrode unless there is an electrolytic demand. The anode maintains a high driving potential throughout its 12 month life, is self-sluffing and always exposes new zinc for the best possible protection. For those applications where cable buoyancy is a problem, the nominal 21 ounce sacrificial anode can be substituted for hanging weights.

Sacrificial Anodes provide cathodic protection against galvanic corrosion for our submersible pressure transducers. Galvanic corrosion occurs when dissimilar metals are placed in contact with an electrolyte. This condition causes a potential difference to exist between the two metals, causing electron flow between them. Corrosion of the less corrosion-resistant metal is increased and attack of the more resistant metal is decreased. The 820 Sacrificial Anode is clamped to the exterior of a one-inch bore submersible transducer. We also offer a 1" diameter pencil anode, the 825, that attaches to the nose cap of either a 3/4" or 1" bore submersible transducer.

### Absolute/Sealed Gage Transducer

The sealed gage option for submersible transducers eliminates the need for a vent filter. The standard output of a sealed gauge transducer is 4 mA at 14.70 psia. Before ordering a sealed gauge transducer, the customer should determine the altitude (above sea level) of the installation and inform PSI's

Customer Service of this value before order entry. During manufacture, the output of the transducer will be adjusted to compensate for the altitude difference, if applicable.

### Polyurethane & Tefzel® Jacketed Cable

Most installations of our submersible pressure transducers connect our polyurethane or Tefzel® cable to a junction box. From this junction box (KPSI Series 840), users typically run their own cable to the required instrumentation. Polyurethane-jacketed cable is used for most applications while Tefzel® material is recommended for more aggressive environments.

Specifications for our standard polyurethane and Tefzel® jacketed cable are as follows:

Specifications	Standard Submersible Cable
Weight	0.05 lbs/ft (0.07 kg/m)
Min. OD	0.28" (7.10 mm)
Max OD	0.31" (7.87 mm)
Conductors	4 - 22 AWG
Insulation Conductors Outer jacket	PVC Polyurethane or Tefzel®
Shield	36 gauge spiral tinned copper wire foil shield with drain wire
Vent Tube	polyethylene, .060" ID (1.52 mm)

- **Chemical resistance of polyurethane:** Potable Water, Wastewater, Borax, Butane, Animal Fat, Carbonic Acid, Citric Acid, Cod Liver Oil, Corn Oil, Glycerin, Glycol, Mineral Oils, Potassium Nitrate, Potassium Sulfate, Silicone Oils, Stoddard Solvent, Tannic Acid (10), Tartaric Acid, Turbine Oil.
- **Chemical resistance of Tefzel®:** Acetic Acid (Glacial), Acetic Anhydride, Acetone, Aluminum Chloride, Anti-Freeze, Bromine, Calcium Chloride, Calcium Hydroxide, Chlorine, Copper Chloride, Ferrous Chloride, Hydrochloric Acid, Ketones, Lacquer Thinners, Sulfuric Acid.

The vented cable termination end is specially prepared at the factory to eliminate the potential for moisture migration. Where the lead wires emerge from under the jacket, there's potting material and a shrink tube "boot", every effort should be made to leave this feature intact. Should the cable be longer than needed for the installation, it is recommended that the excess length be accommodated in a service loop and that the potted end of the cable **NOT** be shortened.

The cable attached to this instrument is specifically engineered for submersible applications. The polyurethane outer jacket provides long term reliability under most conditions. The cable should be handled carefully, however, as the jacket may be subject to cutting should it be "raked" over extremely sharp edges. To guard against water incursion should an inadvertent minor cut occur, we have incorporated an exclusive "water block" feature immediately beneath the jacket. The cable is

fully shielded, with the shield connected to the metal housing at the transducer end and terminated in a drain wire at the termination or user end. The shield should always be terminated to a good earth ground, unless the transducer is installed in an area where galvanic corrosion is known to be a serious problem.

### **Lightning Protection**

Lightning and surge protection for the 0-5 VDC (Option 012) and 4-20 mA (Option 009) output are available, but only for 1 inch diameter units. This is achieved through the use of 2 protectors, one is integral to the transducer housing and one is provided for the outside line located at the surface and grounded to a DIN-Rail. Please remember this option must be factory installed at the time of order entry or as a factory upgrade. **This option cannot be installed in the field.**

Featuring quick response and low clamping voltages, these devices protect against fast rising voltage transients as well as severe current surges associated with lightning discharges up to 20,000 amperes. Following a surge, the protector automatically restores the line to normal operation and awaits the next surge without having to reset a breaker or replace a fuse. **Transducers installed with this option have a lifetime warranty against damage due to voltage surge.**

**Please note: When using the lightning protection option on 4-20 mA products, users should take into account the additional series resistance of this option when selecting the loop power supply. This option will increase total loop resistance by 88 Ohms.**

### **½" Male NPT Conduit Fitting**

Submersible pressure transducers can be attached to a rigid conduit and the cable run through the conduit. To achieve this, all of our submersible transducers can be fitted with an optional ½" NPT male conduit fitting (specify "Electrical Connection Option 4" when ordering) where the cable exits the transducer. This fitting can be mated to a standard rigid conduit.

### **Variety of Electrical Outputs**

Most applications call for a 0-5 VDC, 4-20 mA or a 0-100 mV output. But where necessary, our transducers offer a broad choice of possibilities including, among others, 0-10 VDC, 0-2.5 VDC, or ratiometric mV/V.

### **Reverse Signal**

For some applications, it is important to know how far the water is from the top of the tank or the surface of the ground. If specified by the customer, our factory can set the transducer so that zero pressure reads full scale electrical output and maximum pressure reads zero electrical output.

### **Temperature Output**

A temperature output option is available for most transducer having 4-20 mA pressure output. The temperature sensor requires an excitation of 9-30 VDC and is calibrated for a temperature range of 0 to 50°C or -20 to 60°C with an accuracy of ±4°C.

### **Cable Hanger**

We can supply an optional cable hanger (P/N 12-90-0931) to help end users secure the cable. The cable hanger can be positioned anywhere on the cable by pushing the ends together. Once positioned, the cable hanger expands and provides a snug grip on the cable.

When mounting the transducer in a well casing, the cable hanger can be secured to a hook on the well plate or an eye bolt may be attached to the side of the well casing. The cable hanger loop is then secured to the eye bolt by using any number of types of fasteners. A similar technique can be used when working in stilling wells for surface water level measurement. In this case, the loop-end of the cable hanger can be attached directly to a screw or bolt bored into the still well shelf.

### **Cable Splicing Kit**

Our field-installable cable splice kit (P/N 830) allows you to splice polyurethane and Tefzel® cable. It is most commonly used for well applications where the more expensive Tefzel® cable is required for suspension in corrosive media where the liquid level is fairly shallow, but the well is hundreds of feet in depth. It is also used in emergency situations where cable must be spliced together to get an application up and running.

## 4.0 Installation & Maintenance Tips

### General Installation Procedures

The following is important installation and preventive maintenance information. Our Customer Service or Applications Engineering Support staff can provide additional instruction.

1. **Transducer Anchors:** Most users either suspend our submersible transducers in stilling wells or attach them to rigid conduit. This is done to prevent damage to the transducer from shock caused by water turbulence. It is not advisable to tie your transducer to a pump or to piping, as any problem with the transducer could require that the pump be pulled from the installation. This could prove to be *very expensive*. (Please refer to the Cable Anchoring Schemes drawing in **Appendix A**.)

Some applications use our optional bracket (P/N 49-06-00PC) to clamp the transducer to a fixed object (i.e., wall, ladder, step) or require the unit to be suspended without any protective still well or attachment device. In all installations, care should be taken to ensure no damage occurs to the cable as cable damage represents one of the most frequent causes of transducer failure.

2. **Transducer Submersion:** Damage to submersible cable is one of the most frequent causes of transducer failure. Lower your transducer into the liquid slowly, making sure the cable does not drag over sharp edges and only to the depth necessary. Avoid dropping the unit from the surface.
3. **SuperDry™ Vent Filter (Desiccant) or Aneroid Bellows Installation** (For vented gage pressure format only) *Always* install a desiccant vent filter or aneroid bellows immediately after transducer installation. Failure to use one or the other could result in premature failure of the transducer; which would not be covered by warranty. If you use a desiccant filter, you should establish a regular maintenance schedule. You should change your vent filter when it is 75% spent (pink color). Replacement filters are available at a nominal cost from the factory. Do not remove the old vent filter until a new one is available. The most common failure mode of our transducers is moisture and corrosion damage due to lack of use or maintenance of the vent filter. **Remember to remove the filter's protective black cap upon installation.** This will allow air into the desiccant filter and allows the transducer to properly vent with changes in barometric pressure.

To install/replace either the aneroid bellows or the vent filter, simply unplug the old unit from the vent tube and plug the 0.062" x 1" stainless steel connector tube (supplied with each filter or bellows) into the vent tube. (Installation and mounting instructions are supplied with each aneroid bellows and vent filter.) The diagram on page A-4 shows typical vent filter and aneroid bellows hookups.

4. **Cable Protection** An inexpensive way to protect the cable from damage is to order the submersible pressure transducer with a ½" conduit attachment. Connect an inexpensive flexible 5/8" garden hose to the ½" conduit fitting with an equally inexpensive female PVC ½" NPT x 3/4" NHT swivel fitting, available at your local hardware store.

5. **Bending of Cable** Our polyurethane and Tefzel® jacketed cables are quite flexible. Care needs to be taken to ensure that when bending the cable to suit your installation you do not crimp the vent tube inside the cable. Consequently, do not bend the cable more than a radius of 1 inch.
6. **Cable Compression** Many users require a compression fitting to secure our Tefzel® and polyurethane jacketed cable as it enters a junction box. Care needs to be taken that you do not over-tighten the fitting so as to damage the cable.
7. **4-20 mA Wiring** When connecting a 2-wire 4-20 mA transducer to a typical power supply and milliammeter, verify that the meter has an input impedance of at least 10 Ohms. If you are unsure of the input impedance, then a 10 Ohm resistor may be placed in series with the meter and transducer. Connect the + (red) lead of the transducer to the + terminal of the power supply. If the 10 Ohm resistor is required, connect it to the - (black) lead of the transducer. Use a short length of 22-24 AWG wire to connect the + terminal of the meter to the resistor (if it is required) or the - (black) wire of the transducer. Connect the - terminal of the meter to the - terminal of the power supply with a length of 22-24 AWG wire. Connect the drain wire from the transducer to a good earth ground. (See **Appendix**, page **A-2** for wiring diagram.) Please refer to “**Maximum Cable Lengths and Minimum Supply Voltage**” in **Appendix C**, page **C-2** to verify minimum loop supply voltage requirements.
8. **VDC Wiring** To connect a 3 wire VDC output transducer to a typical power supply and the voltmeter, connect the - terminal of the power supply to the - input terminal of the meter with a length of 22-24 AWG wire. Connect the - excitation (black) lead of the transducer to the - input terminal of the meter. Connect the + input terminal of the meter to the signal lead (white) of the transducer. Connect the + terminal of the power supply to the + lead (red) of the transducer. Connect the drain wire to a good earth ground. (See **Appendix A**, page **A-2**.)
9. **The Series 750** comes standard with a field removable diaphragm protector (one-inch or 25 mm standoff). The diaphragm protector can easily be taken off by removing six (6) fasteners located on the bottom of the unit.
10. **Sealed-Gage Transducer Configured For Altitude Above Sea Level** Since sealed-gauge transducers are normally calibrated at sea level, there may be considerable error induced when used at a higher elevation. If the transducer was calibrated without taking into consideration the difference in atmospheric pressure at sea level and the higher elevation, an offset error will occur. In order to eliminate error due to this difference, the customer must identify the elevation where the transducer will be installed. The nominal atmospheric pressure at the location is calculated and the transducer will be ranged accordingly. Not all KPSI transducers are available in a sealed pressure format. Please refer to the appropriate datasheet for availability.
11. **Position Sensitivity** The transducer should be installed so that the diaphragm located behind the nosecap is oriented in a vertical position, otherwise the unit could exhibit an offset.

## General Maintenance Tips

### 1. Desiccant Maintenance

If you use a desiccant vent filter, you should establish a regular maintenance schedule. You should change your vent filter when it is 75% spent (pink color). Replacement filters are available at a nominal cost from the factory. Do not remove the old vent filter until a new one is available. Also, always remove the filter's protective cap when in use. Remember that Pressure Systems' improved 810 SuperDry™ Vent Filter are designed to be effective for at least one year before requiring replacement.

### 2. Clogged Nose Piece or Dirty Diaphragm

Either of these conditions could result in erroneous readings from your transducer. **NEVER** attempt to clean your transducer's nose piece or diaphragm with a sharp or hard object. This could dent the sensor diaphragm and cause permanent damage to the transducer. Your transducer may be cleaned in accordance with the procedures listed in step 4, below.

### 3. Cleaning your transducer

Materials required:

Plastic bowls 8-12 inches (200-300 mm) in diameter and 4-6 inches (100 - 150 mm) deep

Supply of clean, lint-free cleaning rags

32 ounce bottle of "The Works-Tub and Shower Cleaner" (a mild detergent) manufactured by Lime-O-Sol Company in Ashley, IN 46705 and available locally through Wal-Mart, K-Mart, Target, and Ace Hardware stores at \$2 to \$4 per bottle.

**Preparation:** Prior to cleaning your pressure transducer, ensure that all procedures have been followed in the proper cleaning of the cable and transducer to remove any hazardous materials. The vent filter (or bellows) must be properly attached. The cable should be coiled to ensure ease of handling and it must be protected against the possibility of accidental abrasion and/or penetration of the cable jacket by sharp objects. A lead length of 1 to 1 ½ feet (0.3 - 0.45 m) of cable from the transducer should be allowed to facilitate handling during cleaning. The protective covering (or similar protective device) that is shipped with each transducer should be attached to the transducer at all times. It should only be removed prior to installation or cleaning.

Your work surface needs to be clean and free of clutter and large enough to accommodate all materials required in addition to the transducer and cable. Fill one of the bowls with fresh water, one with a mild detergent mixed with water and the last with 16 ounces (0.45 kg) of "The Works".

**Cleaning:**

- Step 1:** Holding the cable 6 inches (150 mm) from the transducer, immerse the unit in the bowl containing the mild detergent and stir for 20-30 seconds. Remove and rinse in the bowl containing the fresh water, using the same stirring motion used in the mild detergent. Rinse and wipe dry.
- Step 2:** Holding the body of the transducer with one hand so that you are looking at the retaining screen protecting the sensor, carefully remove the sensor nose piece by simply unscrewing it from the sensor body. *Do not touch the sensor diaphragm with your finger or any other object. Also, do not try to dry the inside portion of the transducer, as you risk damaging the pressure sensor.*
- Step 3:** Place the transducer in a vertical position with the pressure sensing end facing downward in the bowl containing “The Works” solution for approximately 15-20 seconds. Rinse in the bowl containing clean water and wipe dry the external casing only. Place the protective screen in the same solution for 15-20 seconds, rinse and wipe dry.
- Step 4:** Holding the transducer in a vertical position so that you can see the face of the pressure sensor, screw the protective nose piece back into place.

## 5.0 Warranty and Product Return Procedure

Any transducer/transmitter that is less than 2 years old (see DOM) which does not meet the product's specifications and exhibits **no obvious physical damage to the housing, sensor, or cable (cuts)**, will be replaced under warranty.

**Units 2-3 years old:** Units that fall within this age group and exhibit no obvious physical damage to the housing, sensor, or cable (cuts), are replaced at a discounted list price.

**Units greater than 3 years old:** Units that fall within this age group are not repaired or replaced under warranty.

### Merchandise Return Procedures

Contact the **Applications Support Group** or the **Customer Service Department** at Pressure Systems if your transducer is not operating properly. Our staff is available for troubleshooting at **(757) 865-1243** or toll free at **1-800-328-3665** during normal working hours, Eastern time. If your transducer or accessory needs to be returned to Pressure Systems, obtain a *Returned Merchandise Authorization* (RMA) from the Customer Service Department prior to shipment. In Europe, please call 44 (0) 1252 510000.

Be prepared to supply the following information when requesting the RMA:

- Part number
- Serial number
- Complete description of problems/symptoms
- **Bill To** and **Ship To** address
- Purchase order number (not required for warranty repairs)
- Customer contact and telephone number

The above information, including the RMA number, must be on the customer's shipping documents that accompany the equipment to be repaired. Pressure Systems also requests that the outside of the shipping container be labeled with the RMA number to assist in tracking the repairs. All equipment should be sent to the following address:

ATTN: KPSI TRANSDUCER REPAIR DEPARTMENT (7-digit RMA number)  
Pressure Systems, Inc.  
34 Research Drive  
Hampton, Virginia 23666

or in Europe:

Pressure Systems Ltd.  
124 Victoria Road  
Farnborough, Hants GU14 7PN  
United Kingdom

Prior to returning to Pressure Systems, the transducer and cable must be cleaned per instructions provided on the cleaning certificate supplied when the transducer was delivered. The certificate can also be found on Pressure Systems website at [www.PressureSystems.com/cleaning.html](http://www.PressureSystems.com/cleaning.html). The completed certificate must accompany the transducer when shipped to Pressure Systems. If the transducer has been used in media other than potable water, PSI customer service must be notified at the same time an RMA number is requested. PSI reserves the right to reject any shipment deemed to be unsanitary or environmentally unsafe to handle. If these guidelines are not met, the package will be sent back unopened and at the customer’s expense. ***Please include the attached vent filter or aneroid bellow with each returned transducer.***

Pressure Systems will return warranty items prepaid via UPS GROUND. If the customer desires another method of return shipment, Pressure Systems will prepay and add the shipping charges to the repair bill.

Incoming freight charges are the customer’s responsibility. The customer is also responsible for shipping charges to and from Pressure Systems for all equipment not under warranty.

Once the return is received, it typically takes 5-10 working days for the technician to make a fault determination.

A cable reconnect fee will be charged when the customer requests a different length of cable.

**Restocking Policy**

Pressure Systems does allow standard products to be returned for credit in the event it is no longer required, providing the products are in new and unused condition. A restocking fee will be assessed depending on the model type and variety.

A **25% restocking fee** applies to the following models, providing they are vented-gage pressure format and pressure ranges above 3 psig (20 kPa) and below 100 psig (690 kPa).

27	116	320	700	720
28	169	342	710	750
Display Meters - all models				

A **50% restocking fee** applies to the following models. This also applies to all other models with sealed-gage and absolute pressure formats as well as vented-gage pressure formats with pressure ranges below 3 psig (20 kPa) and above 100 psig (690 kPa).

30	200	343	551
35	300DS	500	730
126	330	510	735
173	335	550	772

**NOTE:** Expedite premiums and shipping charges are non-refundable.




# Appendix A

## Drawings and Diagrams


Wiring Diagram VDC, mA, mV and Temp Output .....	A-2
Cable Anchoring Schemes .....	A-3
Reference Connection Schemes .....	A-3
Submersible Cable Termination .....	A-4

## Wiring Diagrams: VDC, mA, mV, and Temp Output

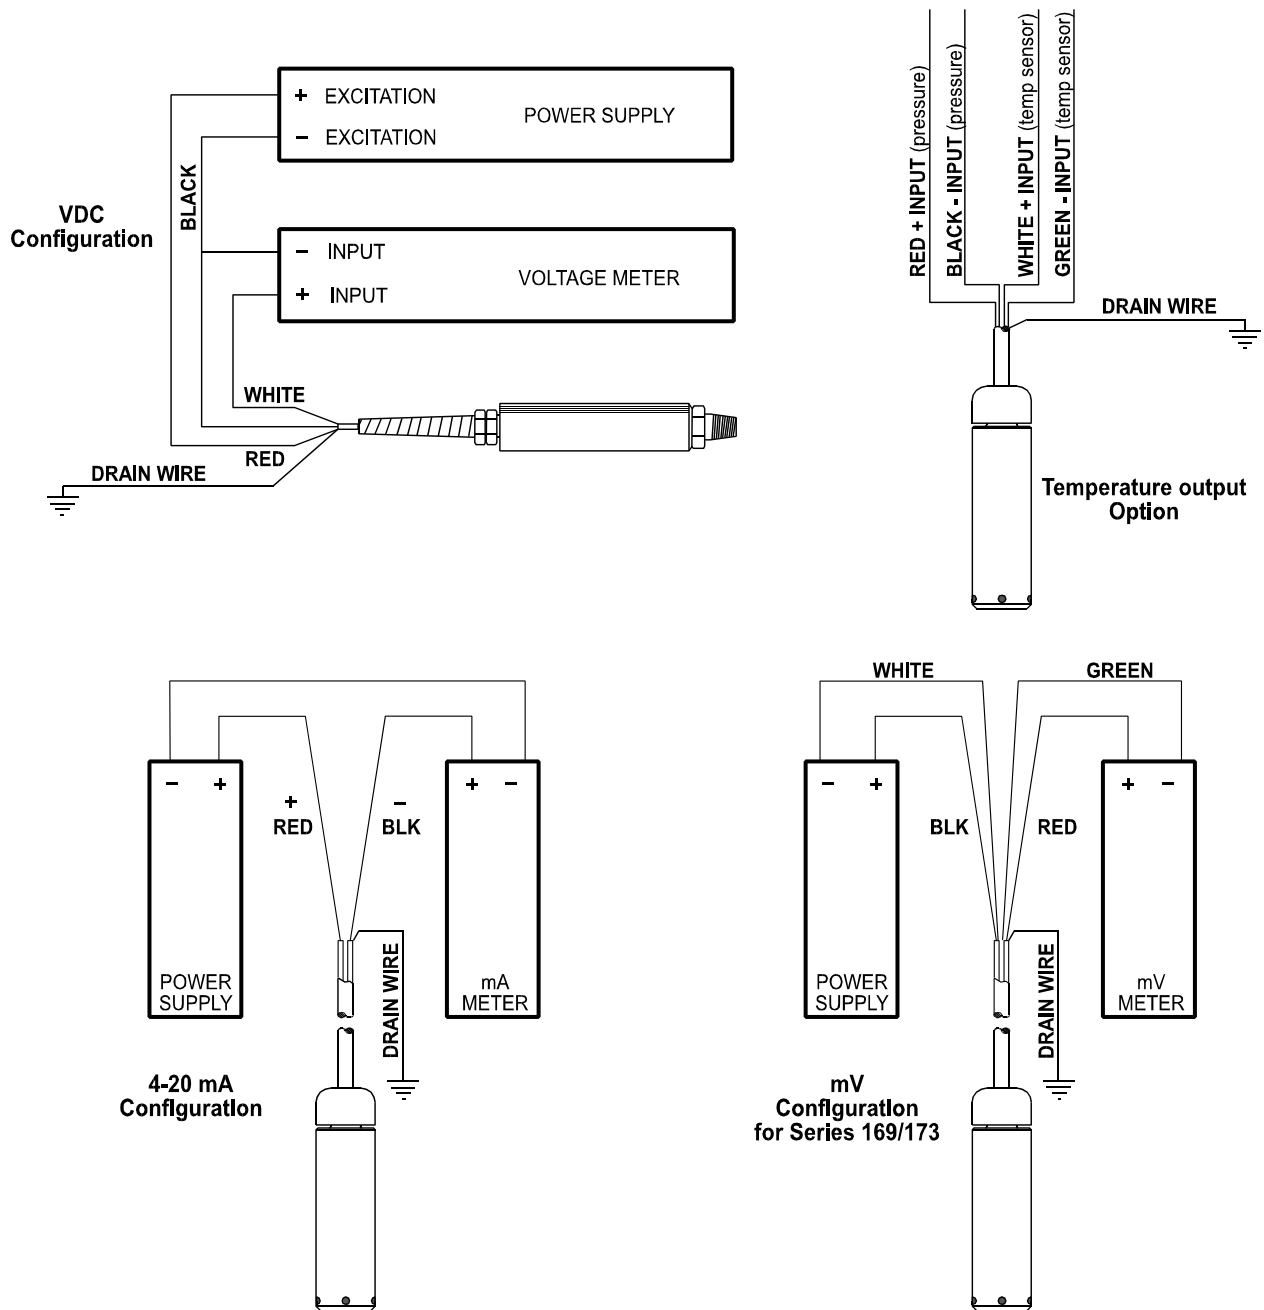


**Notes:**

1. These diagrams depict typical installations. Refer to your power supply and instrumentation manufacturer for the specifics of your application. Drain Wire = Shield
2. For series 770, leave unused wires floating. Shorting these wires can damage the transducer.

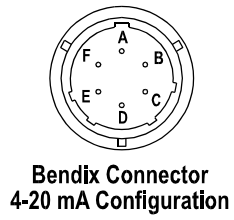


4-20 mA OUTPUT

WIRING INFORMATION	
PIN	NAME
A	+ SUPPLY
B	- SUPPLY
C	(NOT USED)
D	(NOT USED)
E	(NOT USED)
F	SHIELD

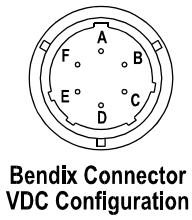


VDC OUTPUT

WIRING INFORMATION	
PIN	NAME
A	+ SUPPLY
B	+ OUTPUT
C	COMMON
D	COMMON
E	(NOT USED)
F	SHIELD

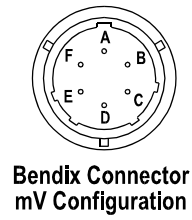


mV OUTPUT

WIRING INFORMATION	
PIN	NAME
A	+ SUPPLY
B	+ OUTPUT
C	- OUTPUT
D	- SUPPLY
E	(NOT USED)
F	SHIELD

 

4-20 mA OUTPUT


WIRING INFORMATION	
PIN	NAME
1	+ INPUT
2	- INPUT
3	(NOT USED)
4	SHIELD

 


VOLTAGE OUTPUT

WIRING INFORMATION	
PIN	NAME
1	+ INPUT
2	+ SIGNAL
3	COMMON
4	SHIELD


## CABLE ANCHORING SCHEMES

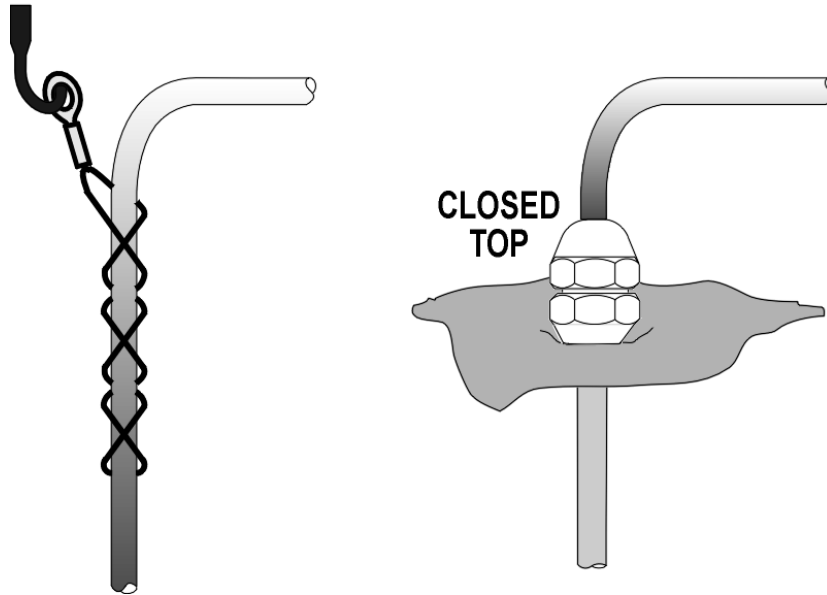

## REFERENCE CONNECTION SCHEMES

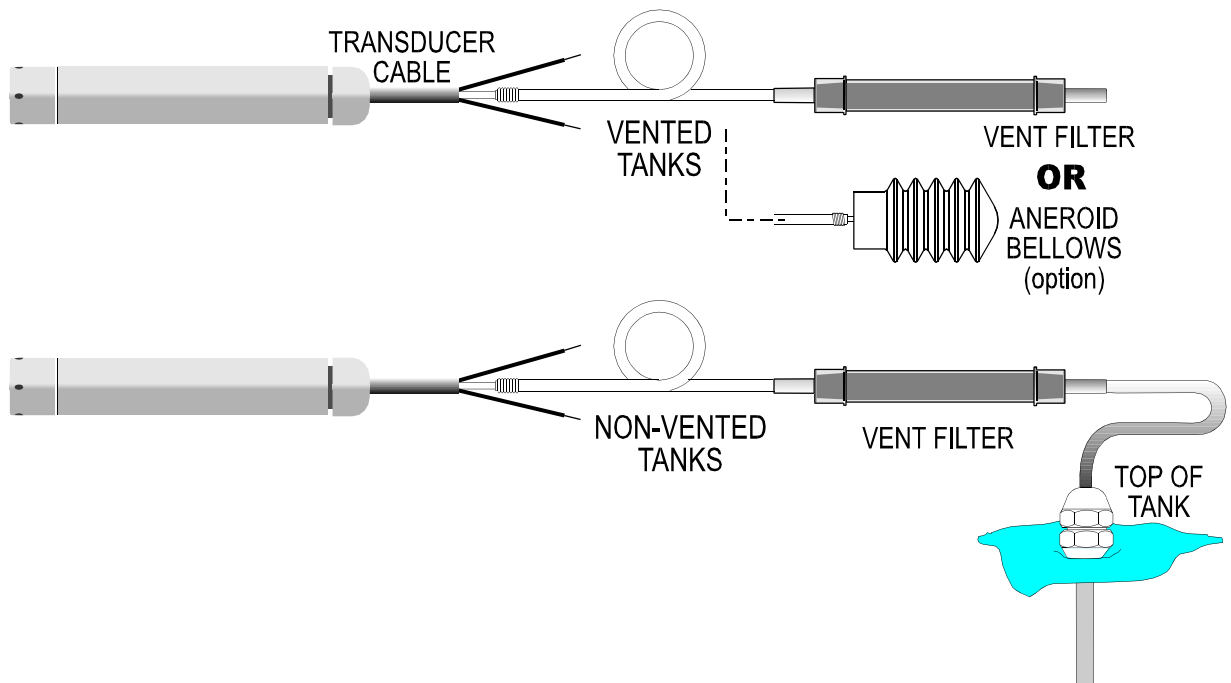

## SUBMERSIBLE CABLE TERMINATION

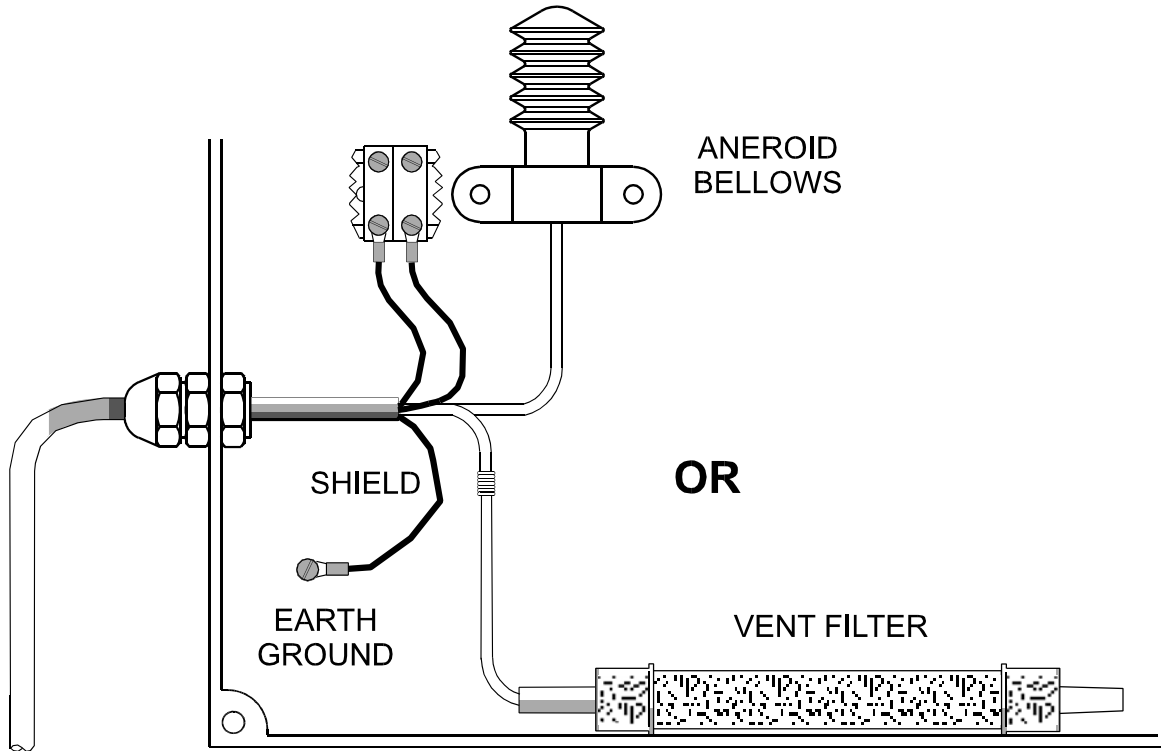

This page intentionally left blank

## Appendix B

### Frequently Asked Questions

- 1    **Question:**   What installation ideas do you have to help me get rid of electrical noise interfering with the signal?

**Answer:**     An ounce of prevention goes a long way. Either try to eliminate the source of noise or move the transducer as far away from it as possible. We strongly encourage you to secure our cable shield to a good earth ground and that you use a 4-20 mA signal output. Armed with these precautions and the fact that many of our transducers are CE approved for electromagnetic interference, you should have few problems.
  
- 2    **Question:**   The cable on the submersible transducer always seems to get cut and damaged. What am I doing wrong?

**Answer:**     This is the most common problem that our users encounter. Make sure that all of your colleagues and staff understand the importance of handling the cable with care. The cable should not be bent around rough or sharp edges. Always use a cable reel during transport. Where possible, suspend the unit in a perforated 2" (50 mm) PVC pipe and thread the cable through protective conduit to the nearest junction box. This is a problem that Pressure Systems' directly addresses with the water block feature in our cable.
  
- 3    **Question:**   I have an application where the transducer is frequently damaged by voltage spikes. What can be done to prevent this?

**Answer:**     At a minimum, make sure the cable shield is connected to an earth ground as near as possible to the transducer. We can provide a surge protection kit for both our below and above ground transducers and transmitters. See page 4. These kits will handle typical spikes that might come in through the power lines as well as surges that travel through the ground due to nearby lightning strikes.
  
- 4    **Question:**   How much impact shock can your submersible transducers withstand?

**Answer:**     The lower pressure ranges can be damaged if dropped from several feet onto an unforgiving surface like concrete, so we recommend that the protective shipping foam remain in place until the unit is installed.

- 5 **Question:** What is the response time of your transducer?  
**Answer:** From initial power up, the transducer output will stabilize within a fraction of a second. The frequency response is rather low, probably less than 1 kHz, but it really depends on the application, the media, plumbing, etc. Call our factory for application assistance if frequency response is critical in your application.
- 6 **Question:** How do I attach your vent filter or aneroid bellows to my cable vent tube?  
**Answer:** The vent filter can be mounted anywhere convenient, preferably out of the weather. It can be mounted in any position and connects to the cable vent tube via the extension tube with metal connector tube provided. The aneroid bellows must be mounted in a way that its movement is not encumbered. It is provided with a mounting base.
- 7 **Question:** What is the best way to mark my cable?  
**Answer:** Use white vinyl marking tape available from your local hardware or electronic stores. These same stores may also sell cable marking kits.
- 8 **Question:** Any ideas for preventing marine growth on your submersible transducers?  
**Answer:** You might want to try waterproof grease. Remove the threaded nose cap to facilitate applying the grease. Take care when applying the grease not to trap air bubbles against the sensing diaphragm and not to damage the diaphragm.
- 9 **Question:** How many pressure measurements can you make before the diaphragm on the pressure sensor fails?  
**Answer:** In normal operation - millions of cycles. We find that transducer failure is rarely due to diaphragm fatigue.
- 10 **Question:** What is the turnaround time on repairs?  
**Answer:** Once we receive a unit into our facility it takes less than 10 working days to complete an evaluation.
- 11 **Question:** What is the longest length of cable you have attached to a submersible transducer?  
**Answer:** Two thousand feet (610 meters).
- 12 **Question:** Why do you use 316 SS housings and sensors for your standard transducers?  
**Answer:** It offers a good combination of corrosion resistance and reasonable cost. As an option, we do offer titanium for more aggressive environments.

13 **Question:** What wire gauge should I limit myself to when connecting to your 22 AWG wire?

**Answer:** Use 22 AWG or heavier.

14 **Question:** Does it make any difference if I mount the transducer in a vertical or horizontal position?

**Answer:** Yes. Our units will experience a certain amount of position sensitivity. You should mount it in a vertical position throughout the measurement cycle. If you lay the transducer down, the user must realize that an offset will occur.

15 **Question:** What happens when you freeze your transducer in a column of water?

**Answer:** We have frozen our submersibles in a container of water in a home freezer, with no resulting damage. However, depending on the pressure range of the unit, over pressure of the unit is possible. In harsh environments where debris is common and ice shifts, you might expect damage to both the transducer and cable.

16 **Question:** Why would I chose KPSI transducers versus a competitor?

**Answer:** Reliable, long lasting products  
Rapid delivery  
Lightning protection lifetime warranty  
Excellent pre & post sales/application support  
No hassle service

This page intentionally left blank

## Appendix C

### Troubleshooting Techniques

#### Quick Check Procedure


The following is a quick field checkout procedure for **KPSI™** level and pressure transducers. It will be referred to throughout the troubleshooting section.

Should a problem be encountered with a transducer or transmitter, it is sometimes helpful to test the transducer independently from the rest of the system, thereby establishing where to concentrate the troubleshooting effort.

Shown below and on the next page are simple hookup diagrams for the two most common types of electrical output, a 0-5 VDC transducer and a 4-20 mA transmitter. In either case, the “power supply” can be a common 12 volt lantern battery, or even a 9 volt transistor radio battery, although the lifetime of a 9 volt battery will be limited. The meter should be a digital type capable of reading at least 2 digits to the right of the decimal point. Use 22 gage or heavier hookup wire or clip leads for jumpers. If your unit has other than a 0-5 VDC or 4-20 mA output, please call Applications Support at **(800) 678-7226** for assistance. In Europe, call **44 (0) 1252 510000**.

Once your transducer is correctly configured per one of the diagrams below, orient the transducer in a vertical position with the pressure port down and then read the zero output on your meter. For a 0-5 VDC output, the zero should be between 0 and 0.10 volts, and for a 4-20 mA output, between 3.80 and 4.20 mA. For Series 300, the values do not change for VDC output but the values for mA are between 3.88 and 4.12 mA. If the output is outside of these limits, you may, at your option, choose to troubleshoot the transducer per the suggested measurements shown below. Otherwise, contact our Customer Service Department at **(800) 678-7226** for a Return Material Authorization number (RMA). In Europe, call **44 (0) 1252 510000**.

If the zero output is within these limits, the problem will more than likely be found elsewhere in your system.

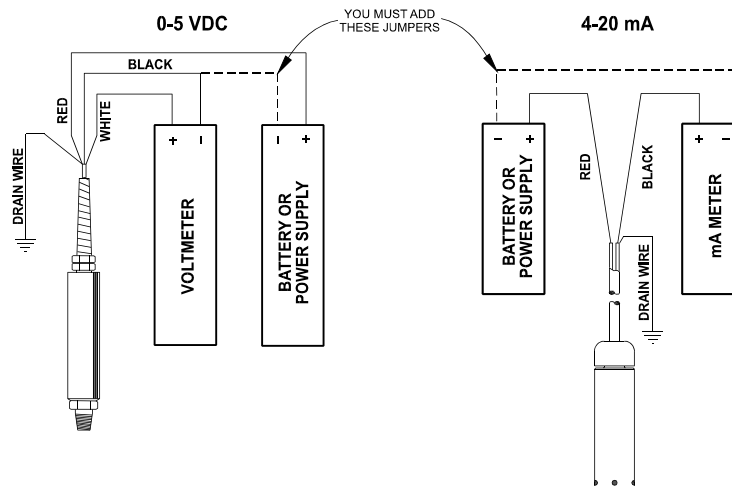

When an error is observed at a customer’s installation, it is important to determine if the fault lies in the transducer or the instrument reading the transducer signal, ie. digital panel meter, programmable logic controller, etc. . To do this, a second instrument should be used to confirm the observations. The second instrument may be a handheld DMM (Digital Multi-Meter) or a dedicated milliammeter capable of reading 4-20 mA of current to a resolution of at least 0.1 mA. The diagram above illustrates the attachment of the meter in series with the black (negative signal) wire of the transducer using a 9-30 VDC power supply for transducer excitation. Some suggested power supplies are:

- C 1 - 12 VDC automotive battery.
- C 2 - 6 VDC lantern batteries connected in series (for a total of 12 VDC).
- C 2 - 9 VDC transistor batteries connected in series (for a total of 18 VDC).

Batteries are suggested to power the transducer during testing to eliminate the possibility that line noise is passing through an improperly filtered, grounded, or damaged power supply. All measurements should be recorded and sent to Pressure Systems along with the transducer to assist in the evaluation process.

**Further Measurements:**

0-5 VDC	Should read:	4-20 mA	Should read:
+Excitation (white) to Shield (drain)	> 2.5 Mohms	+Excitation (red) to Shield (drain)	> 2.5 Mohms
-Excitation (black) to Shield (drain)	> 2.5 Mohms	-Excitation (black) to Shield (drain)	> 2.5 Mohms
+Output (red) to Shield (drain)	> 2.5 Mohms	Shield (drain) to Housing	< 2 ohms
Shield (blue) to Housing	< 2 ohms		

**Maximum Cable Lengths and Minimum Supply Voltage**

The maximum length of cable to be used with our submersible transducers is largely dependent upon the type of electrical output of the transducer. For a 0-5 VDC output, a maximum cable length of 100 feet (30 m) is recommended. A voltage output is more susceptible to electrical interference than a 4-20 mA signal. A 4-20 mA signal can be transmitted much longer distances, depending upon such factors as temperature, wire size, length of the wire, power supply, and voltage requirements of any devices to be powered. At 25°C the 22 AWG conducting copper wire used in our polyurethane jacketed cable has a resistance of 16.45 ohms per 1000 feet (304 m).

Using Ohms Law ( $E=IR$ ) where  $E$ =voltage,  $I$ =current and  $R$  =resistance, one finds that a 20 mA signal requires .329 volts to drive it along 1000 feet (304 m) of 22 AWG copper wire ( $E=16.45 \times .020$ ). This drop is seen on both the supply and return wire for a total loop voltage drop of 0.658 volts

To find out how much voltage is required to drive our Series 700 submersible pressure transducer's 4-20 mA signal 10,000 feet, just add the minimum power requirement of the 700 (9 VDC) to the resistance offered by 10,000 feet (3048 m) of our polyurethane jacketed cable ( $10,000 \div 1000 \times .658 = 6.58$ ). The resulting power requirement is 15.58 VDC (9 + 6.58).

Connect the cable shield (drain wire) to a good earth ground. This will protect the transducer from relatively minor transient voltages. The only exception to this rule is if high rates of electrolytic corrosion have been previously experienced with grounded submersible devices. In this case it may be better to leave the shield disconnected.

Please note: When using products with the lightning protection option on 4-20 mA products, users should take into account the additional series resistance of this option when selecting the loop power supply. This option will increase total loop resistance by 88 Ohms.

## Troubleshooting Techniques

1    **Symptom:**     *Transducer fails to give output of any kind.*

**Procedure:**     Isolate the problem to either the transducer or the power supply/readout. See the Quick Check Procedures (above) for this check. If it can be determined that the transducer is no longer operable, remove it from service for further analysis. If the transducer output falls within the limits described above, the fault lies somewhere else in your system.

2    **Symptom:**     *Transducer has failed and has been removed for analysis.*

**Procedure:**     Inspect the cable for physical damage. Cuts in the cable jacket can result in liquid incursion into the transducer housing, which can cause permanent damage. To determine if the transducer has been damaged, dry the transducer and cable (see **Drying Your Cable**, page 8) and test for proper operation. If operational, the cable should be repaired or replaced. The cable can be repaired using a splice kit (P/N 830) supplied by Pressure Systems or can be replaced at the factory.

Inspect the transducer housing. It should be intact and free of corrosion. If the outer surface of the transducer is pitted, this could be an indication of galvanic corrosion caused by stray ground currents. If this is the case, the transducer will probably require replacement. If the external case exhibits none of these characteristics, carefully unscrew the nosepiece and look into the pressure sensing end of the transducer. The concentric rings of the sensing diaphragm should be visible. If they are not, it could be that residue has accumulated on the diaphragm, preventing it from responding properly to pressure changes. The transducer can be cleaned by gently swishing the transducer back and forth in a bucket of warm, soapy water until the residue softens and washes off. (See **Cleaning Your Transducer**, page 10.) *Under no circumstances should any object or tool be used to remove residue from the sensing diaphragm or else permanent damage will be done.* If cleaning the diaphragm does not solve the problem, the transducer should be returned to the factory for repair or replacement.

- 3    **Symptom:**    *Transducer develops a negative offset and gets worse over time (actual level exceeds specified level).*
- Procedure:**    This may be a sign that moisture has entered the reference (vent) tube in the cable and is inside the transducer housing. This is usually the result of not maintaining the desiccant vent filter or of operating the transducer without a desiccant filter or aneroid bellows. If caught early enough, the transducer can be saved by coiling the cable and transducer in a pan and baking it in an oven at 50°C (122°F) for a minimum of 2 hours. *Be careful that the oven temperature does not exceed 50°C (122°F) or both the transducer and the cable can be damaged. Alternatively,* suspend both the cable and transducer in a vertical position (with vent tube down), overnight to allow water to drain from the transducer and vent tube.
- 4    **Symptom:**    *Transducer suddenly fails during or just after a nearby lightning event.*
- Procedure:**    This failure is usually caused by overvoltage due to ground transients resulting from a direct or indirect lightning event. These transients can travel distances of a mile or more. The transducer may be returned to the factory for repair and optional retrofit of our *lightning protection system*. This system carries a lifetime warranty against transducer damage due to lightning.
- 5    **Symptom:**    *Transducer response to pressure/level input changes becomes sluggish.*
- Procedure:**    This is usually a sign that the pressure sensing end of the transducer has become fouled with residue. The transducer must be removed from service and the pressure sensing diaphragm cleaned as described in Item 2, (warm, soapy water). If fouling persists, the transducer may be replaced with a Series 750 (wide mouth) transducer, which is specifically designed for trouble-free operation in a high residue environment.
- 6    **Symptom:**    *Output reading is within limits but "freezes" at one point.*
- Procedure:**    In certain environments "crust" may form over the sensing diaphragm, preventing the sensor from identifying change in level. Removing the transducer from service and cleaning it (as described in Item 2) will generally solve the problem. To combat marine growth, you might try wrapping the transducer with copper wire similar to that found in wire scouring pads for cleaning dishes. Marine growth occurs on the copper and eventually erodes the copper and drops off or the copper is manually removed during routine maintenance. Alternatively, there are various companies that will impregnate/coat the 316 stainless steel with anti-fouling chemicals or coatings. Level sensors temporarily removed from the well or sump should not be stored dry, but should be stored in a bucket of fresh water in order to prevent "crust" formation.

- 7    **Symptom:**     *Readings increase very slowly over time.*
- Procedure:**    Our cable is shipped coiled and consequently takes time to straighten when installed. Attaching a weight to the transducer (e.g., one of our sacrificial anodes) will help. To prevent cable stretch with lengths greater than 200 feet (60 m), secure the Kevlar fibers (just under the cable jacket) to your junction box or other secure object.
- 8    **Symptom:**     *No electrical output from your transducer.*
- Procedure:**    Check all electrical connections to ensure they are correct and secure. Double check your power supply or use a battery (as described previously) to ensure the transducer is getting power. If all checks OK, the problem could be a circuit board or the sensor in your transducer. The unit must be returned to the factory for evaluation. The most probable cause of this type of failure is damage to the submersible cable jacket allowing water to leak down the cable and into the transducer housing or lightning damage.
- 9    **Symptom:**     *Transducer was installed and an offset was detected right away.*
- Procedure:**    Ensure the cap to the vent filter was removed, if the cap is not the problem, please contact Application Engineering.
- 10   **Symptom:**     *Formation of marine growth on a submersible transducer.*
- Procedure:**    Certain transducer construction materials, for example, 316 stainless steel, attract marine life (snails) and algae. Clean the transducer diaphragm by soaking it in a bucket of warm water with a non-aggressive cleaning solution. You can also coat the transducer with marine grease. This may be the most effective and inexpensive way to protect your transducer.
- 11   **Symptom:**     *Submersible transducer exhibits corrosion or pitting on body or diaphragm.*
- Procedure:**    Dissimilar metals (for example, your transducer housing and your pump housing) in an electrolytic environment (fluid in your well) can lead to *galvanic corrosion* of the metal that is nearer the anodic end of the galvanic series. Likewise, a voltage potential between the ground wire of the transducer and the ground of other equipment in the well can lead to *galvanic corrosion*. Installation of a **KPSI™** 820 or 825 sacrificial anode will help protect your transducer from *galvanic corrosion*. Our sacrificial anodes are made of a zinc alloy that, being nearer the anodic end of the galvanic series than the 316 stainless steel or titanium housing of the transducer, will corrode before the transducer.

- 12    **Symptom:**     *The transducer is buried in dirt or silt and the readings seem to be erroneous.*
- Procedure:**    Use of a piezometer nosepiece in this application would help. This nosepiece can be easily installed in the field and features a very fine screen to keep dirt from fouling the diaphragm, but allows the diaphragm to sense moisture levels.
- 13    **Symptom:**     *Transducer has an offset error.*
- Procedure:**    Our submersible transducers perform best when the sensing end is pointing in a downward manner. Keep in mind that you can experience offset error due to the position sensitivity or orientation change of the sensor. Offset errors are more prominent in low pressure applications with the sensing end of the transducer lying flat or pointing upward.

14 **Symptom:** *I am testing a Series 700 4-20mA sensor for use with our data logger. On page A-2 of the KPSI User's Manual (10th Edition) I see the standard 4-20mA configuration. Does the recording channel of my data logger become the mA meter?*

**Procedure:** Most data loggers cannot measure current (mA) directly. When this is the case a load resistor must be used to convert the current (mA) output into an appropriate voltage. If the User's Manual for your particular instrument does not illustrate a preferred method for recording current (mA) data then you should attach your transducer signal wires to your data logger in the following manner.

Transducer red wire - Data Logger Excitation Terminal  
(The minimum excitation for a Series 700 Transducer is 9VDC)  
Transducer black wire – Data Logger signal input (+) terminal

Attach a Load resistor between the Data Logger signal input (+) terminal and the Data Logger signal input (-) terminal.

Attach a separate piece of wire between the Data Logger signal input (-) and analog ground.

In this configuration you will turn your data logger into a milliammeter. The size of your load resistor can be calculated in the following manner.

$$D/0.02=R$$

Where:

Data logger input range = D

Full scale output of transducer = 0.02 A (20 mA)

Load Resistor Value = R

Pick an appropriate standard value

250 Ohms results in 1 to 5 VDC at 4 and 20 mADC

125 Ohms results in 0.5 to 2.5 VDC (500 to 2500 mVDC) at 4 and 20 mADC

At this point the discussion needs to address IR loss (voltage drop) in series circuits. Note that Series 700 transducers need a minimum of 9 VDC to operate correctly. When the transducer is operating correctly it will output a current which, when driven through a resistor, will generate some amount of voltage drop. If the resistor value is 250 Ohms then the voltage measured across that resistor will be  $0.004 \text{ A} * 250 \text{ Ohms} = 1.000 \text{ VDC}$  and  $0.020 \text{ A} * 250 \text{ Ohms} = 5 \text{ VDC}$ . Notice that, if the available voltage from the data logger is 12 VDC then  $12 \text{ VDC} - 5 \text{ VDC} = 7 \text{ VDC}$  which is less than the voltage required by the transducer to operate. If this scenario were to occur the transducer would actually stop functioning correctly when its output reached 12 mADC (50 % of transducer full scale range). In this case the appropriate choice for a load resistor value is 125 Ohms.

- 15 **Symptom:** *I have a Series 700 4-20mA transducer rated for 7.5 PSIG attached to a pressure source that is outputting 7.5 PSIG. With 20VDC being supplied I am getting 19.94 mA. I can't find the upper range allowance for the sensor, but this seems low to me. Does this mA reading fall into the acceptable range for the sensor with the settings I've specified?*

**Procedure:** When evaluating a transducer it is sometimes convenient to make some broad generalizations in order to rapidly determine the condition of the unit. In general, transducers that output a 4-20 mADC signal have a 16 mADC span (4 - 20 = 16). If the transducers accuracy is reported as being some percentage of its full-scale pressure range then the following table could be used in conjunction with the instructional notations to determine whether a more detailed analysis of data quality is required.

Model	Accuracy	Accuracy in mADC
700	1.00%FS	±0.16 ma
710	0.50%FS	±0.08 ma
720	0.25%FS	±0.05 ma
730	0.10%FS	±0.016 ma
735	0.05%FS	±0.008 ma

In order to approximately determine how many milliamps a transducer should output at a given depth.

1. Determine the depth (in feet) at which the transducer is sited.
2. Divide the depth value (from step 1) by the transducer full-scale range (in feet). - Record the value.
3. Multiply the value calculated in step 2 by 16 (the transducer span in milliamps).
4. Add 4 to the product of step 3. This is the approximate value in milliamps that should be output by the transducer at its current depth.

In order to approximately determine the depth of a transducer (in feet) using a given value of milliamps.

1. Divide the full-scale range of the transducer (in feet) by 16.  
Record this value.
2. Subtract 4 from the milliamp output of the transducer.  
Record this value
3. Multiply the result of step one by the result of step 2.  
This is the approximate depth at which the transducer is sited.

If the resulting numbers are reasonably close to some verified value for current water depth, then the unit is functioning. In order to determine the quality of measurement, additional steps need to be performed.

## Appendix D

### Calibration Calculations

Pressure Systems ships a calibration sheet with every water level transducer. This sheet lists the actual values that were output by the transducer, when it was being manufactured, at several different pressures. In addition, two coefficients are provided that can be used to calculate the actual depth from any given mA output value. These coefficients are derived from a Least Squares Best Fit Straight Line (BFSL) calibration using the data listed on the datasheet. Our accuracy specification is referenced to the line described by the BFSL coefficients and so the transducer may not output exactly 4 mADC at zero pressure and 20 mADC at full-scale. As an example here is an example of data for a typical transducer.

Test Date	3/24/2005
Test Time	7:32:54
Zero Pressure	0
Full Pressure	6
Pressure Units	psig
Serial No	402751
Model No	700-140-0006
Excitation	9-30 VDC
Output	4-20 mA
Electrical	2-wire Cable Termination
EC1	RED: +SUPPLY
EC2	BLACK: - SUPPLY
EC3	BLUE: SHIELD

#### SUMMARY OUTPUT

<i>Coefficients</i>				
Offset	-1.489789766			
Span	0.373836306			
Calibration Data		Verification Data		
<i>mA</i>	<i>True PSIG</i>	<i>Predicted PSIG</i>	<i>Residual Error</i>	<i>Error%FS</i>
3.9875	0.0024	0.000882505	0.001517495	0.0253%
7.1905	1.202	1.198280195	0.003719805	0.0620%
10.4085	2.3976	2.401285428	-0.003685428	-0.0614%
13.6176	3.5986	3.600963519	-0.002363519	-0.0394%
16.8214	4.8001	4.798660227	0.001439723	0.0240%
20.0258	5.9998	5.996581337	0.003218663	0.0536%
16.8217	4.7994	4.798772428	0.000627572	0.0105%
13.622	3.5997	3.602608398	-0.002908398	-0.0485%
10.411	2.4004	2.402220019	-0.001820019	-0.0303%
7.1941	1.1984	1.199626005	-0.001226005	-0.0204%
3.9876	0.0024	0.000919889	0.001480111	0.0247%

In this case, even though the offset or 0 PSIG output was 3.9875 mADC and the full-scale point was 20.0258 mADC the unit actually performed better than its specified accuracy of 1.0% of full-scale range as indicated in the Error % FS column.

The calculation for pressure is illustrated below:

$$\text{PSIG} = (\text{Span} * \text{Output (in mA)}) + \text{Offset}$$

Or, using the coefficients listed above,

$$\text{PSIG} = (0.373836306 * \text{Output (in mA)}) + (-1.489789766)$$

And, to convert to feet of water

$$\text{Feet H}_2\text{O} = \text{PSIG} * 2.307$$



**Headquarters/Factory:**

Pressure Systems, Inc.  
34 Research Drive  
Hampton, VA 23666  
USA  
Phone: (757) 865-1243  
Toll Free: (800) 328-3665  
Fax: (757) 865-8744  
E-mail: [sales@PressureSystems.com](mailto:sales@PressureSystems.com)

**European Office:**

PSI, Ltd.  
124, Victoria Road  
Farnborough, Hants  
GU14 7PW  
United Kingdom  
Phone: +44 1252 510000  
Fax: +44 1252 510099  
E-mail: [PSI@WestonAero.com](mailto:PSI@WestonAero.com)