



## Instructions for Installing HOBO® RX3000 Analog Sensor or Relay Module (RXMOD-x1)

1. Stop the station if currently logging.
2. Press the Connect button and wait for the station to connect to HOBOLink and offload the latest data before a new module is added.
3. Power down the logger by disconnecting the battery and unplugging any charging device.
4. Insert the connector on the back of the module into the receptacle in the left or right module slot. Install the relay module on the right for easier cable routing.
5. Using a Phillips-head screwdriver, tighten the screw at the bottom of the module.
6. Plug in the battery and charging device and wait for the device to power up. Verify that the new module is listed on the LCD screen.

*For instructions on connecting sensors or configuring the module, scan the code or go to: [www.onsetcomp.com/manual/rx3000](http://www.onsetcomp.com/manual/rx3000)*

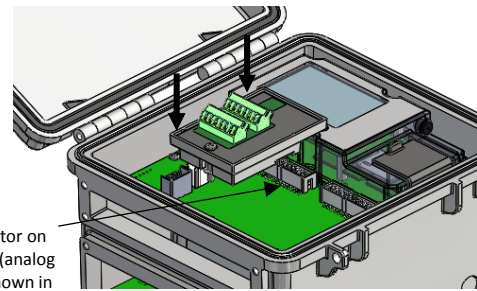

Insert the connector on the module here (analog sensor module shown in this example)

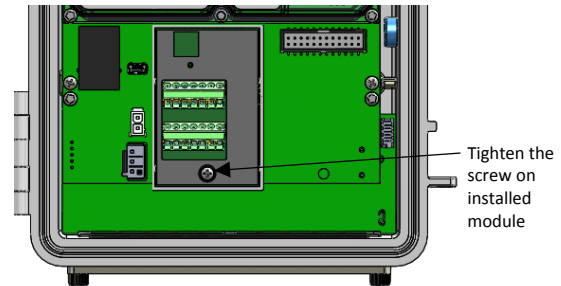

Tighten the screw on installed module