



**PAKSENSE™**  
Sensory Solutions for Packaging

# Ultra Contact Reader Quick Start Guide

## Step 1

Confirm reader is disconnected from PC.

## Step 2

Place label on hard surface.

## Step 3

Press the reader thumb/switch button forward until it clicks. Green PWR light will turn solid green.

## Step 4

Line up the five reader prongs with the five circles on the label.

## Step 5

Press the reader prongs down firmly, quickly, and completely to puncture the plastic covering.

## Step 6

The flashing green READ light will turn solid green to indicate a successful reading. If READ light turns red, label data has not been downloaded. Start process again.

## Step 7


Connect Reader to PC with provided USB cable.

## Step 8

Start PakSense Software and receive labels.

## Step 9

Always disconnect PakSense Reader from USB cable by pulling cable straight out

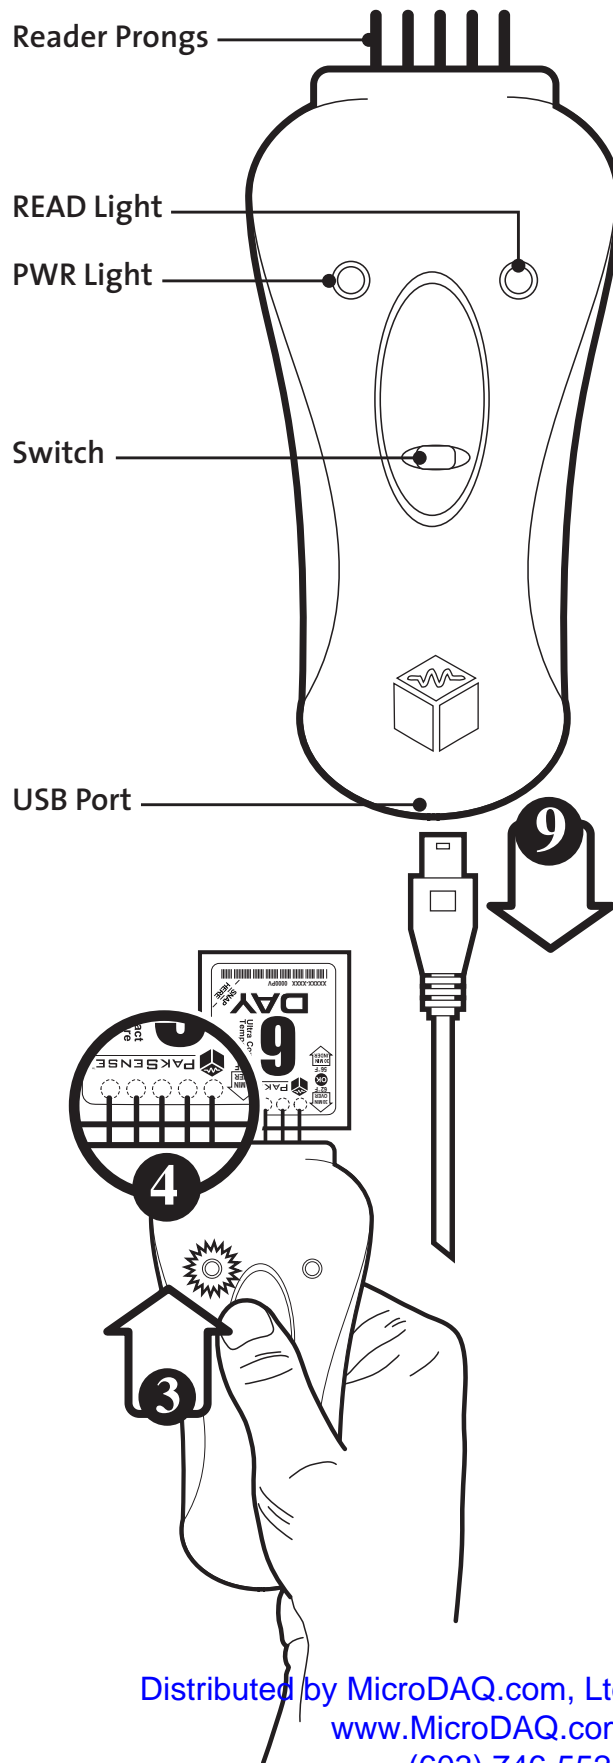

Distributed by [MicroDAQ.com](http://MicroDAQ.com), Ltd  
[www.MicroDAQ.com](http://www.MicroDAQ.com)  
(603) 746-5524