

REED

Model R8090

Sound Level Calibrator

Instruction Manual



1-877-849-2127 | info@reedinstruments.com

www.reedinstruments.com

Features


- Generates a stable acoustic signal at a controlled frequency and amplitude to verify the accuracy of your sound level meter
- Complies with IEC 60942 Class 2
- Accommodates sound meters with 1/2" diameter microphones
- Simply place calibrator on microphone, turn on and adjust your sound level meter

Specifications

Output Sound Pressure Levels:	94dB and 114dB
Accuracy:	±0.5dB
Output Frequency:	1000Hz ±4%
Power Supply:	One 9V battery (included)
Dimensions:	120 x 51 x 43mm
Weight:	Approx. 130g

Instrument Description

1. Microphone adaptor
2. Range switch
3. Battery compartment/cover

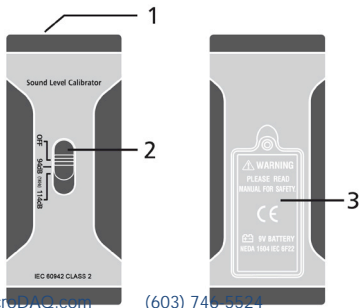

MicroDAQ.com

www.MicroDAQ.com

(603) 746-5924

1-877-849-2127 | info@reedinstruments.com

www.reedinstruments.com

Operating Instructions

Insert the microphone under testing into the calibrator's microphone cavity and ensure that it is fully inserted (sound level meters with 1/2" microphones can be calibrated with this device).

Slide the range switch to the 94dB position, or the 114dB position as desired. The calibrator generates a signal as soon as the switch is set.

Read the sound level meter's value. The sound level meter should read 94dB or 114dB, depending on the calibrator's signal level. If the sound level calibrator does not match the calibrator's signal (within specification), adjust it as explained in the sound level meter's operating instructions.

Slide the range switch to the "OFF" position and remove the microphone.

Battery replacement

Replace the battery when there is no sound pressure output from the sound level calibrator.

Open the battery cover to access the 9V battery. Remove the battery and replace with new 9V battery.

For service on this or any other REED product or information on other REED products, contact REED Instruments at info@reedinstruments.com

MicroDAQ.com

www.MicroDAQ.com

(603) 746-5524

1-877-849-2127 | info@reedinstruments.com

www.reedinstruments.com

